

Table 034



MASKIN

Table 034

When creating Table 034, a noble and vibrant material was chosen, bronze, cut with precision and then polished by hand. Its ingenious stacking system is the result of authentic Swiss logic, joining the legs and stretcher beams with the tabletop in the middle in a unique 4-cross assembly process. The resulting table is the product of Maskin's uncompromising rigour.

www.table034.ch




















L190 X W80 X H74 cm
70 kg

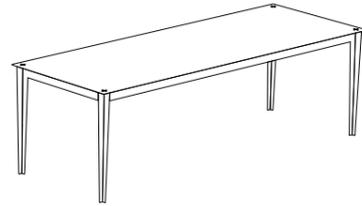

L240 X W88 X H74 cm
90kg

Bronze

Table 034 is made of bronze sheets CuAl10Ni5Fe4. This bronze is a noble material and gives Table 034 its beauty. This inimitable metal evolves year after year. Bronze, like other material, has its own odor, which is not a defect but a characteristic of this noble metal.

Normal use

The Table034 is designed for indoor use. Normal use will provide a patina typical of bronze. Regular maintenance will prevent excessive oxidation. Outdoor use will significantly increase oxidation.

Daily maintenance

Cleaning with a damp cloth immediately followed by drying with a dry cloth is sufficient for the daily maintenance of Table 034. Ensure that the Table034 is completely dry before placing objects on the tabletop.

The residual moisture between the tabletop and a glass, a plate or a dish, for example, may cause a dark mark on the Table 034. This type of oxidation mark is completely and easily removed by the cleaning products described below.

Cleaning


Cleaning with a bronze-specific cleaner will restore a bright, uniform appearance to Table 034. The commercially available bronze, brass or copper products are perfectly suited. Be sure to follow the operating instructions for each product. Depending on the use and appearance of oxidation marks, this type of cleaning will be carried out with an interval of 1 week to 1 month.

Recommended products: cleaning and care products containing 5-15% aliphatic soap, <5% ionic surfactants. Example: Mellerud, Polish Gold, Silver, Brass and Copper. www.mellerud.de

Delivery

Delivery incurs additional costs, which are not borne by the seller but are borne by the buyer. The shipment of furniture is carried out by a carrier. The carrier contacts the buyer by e-mail or telephone to set a delivery date.

The delivery time is 10 weeks. We kindly ask you to accept that delivery times may be postponed according to the production deadlines. In this case, we will inform you by e-mail.

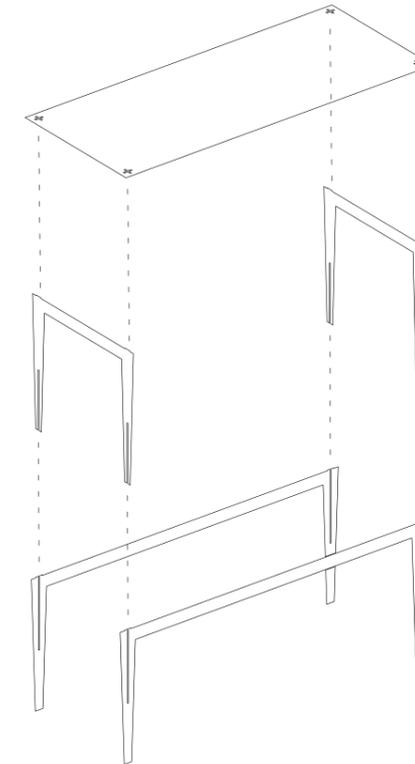

Assembly

Two people are needed for the assembly of the Table034. A person maintains the two pieces of the base the longest so that they are perpendicular to the ground and parallels them. The second person gently inserts one of the short pieces of the base at the end of the two long pieces, then the other short piece at the other end.

Finally the tray is delicately placed over it, carried by the two people, one of each long side of the tray.

Floor contact

As the Table034 is entirely made of bronze, its weight varies according to its size between 70 kg for the Table034 / 190 to 90 kg for the Table034 / 240. Be sure that the ground supports this punctual load. Avoid sliding the Table034 and move it gently. If necessary, provide a carpet or furniture pads under the feet.

MASKIN
2017